

Bluetooth Mailsend Kit

Installation Instructions Android Device

Read Now BEFORE you unpack your equipment

Continue reading below



Right, let's get your Mailsend Kit up and running quickly...

Let's first get together the things you will need:



- The box containing your Mailsend Kit.
- A Welcome Email from Mailcoms containing your Log in details.
- A mobile device on which you have full admin rights to allow downloading and installing software, if necessary.

If you have not received the email from Mailcoms, do not go any further with this installation. Please contact us on **01543 572 776** or email **info@mailcoms.co.uk**.


1. Opening the box and unpacking.

Here's a diagram and explanation of the items you should find in your box.

Printer

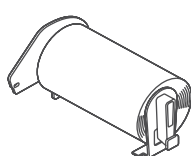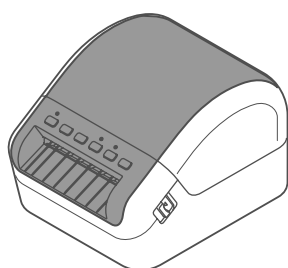

Label Roll
(DK roll)


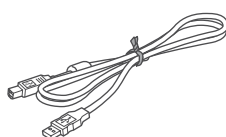


USB




Power Cord

Scale

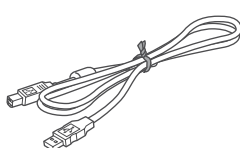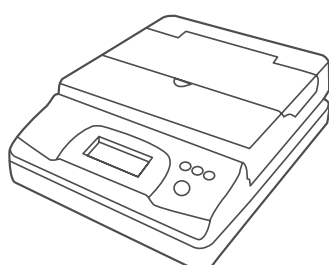

USB

Printer control panel buttons you need to use.

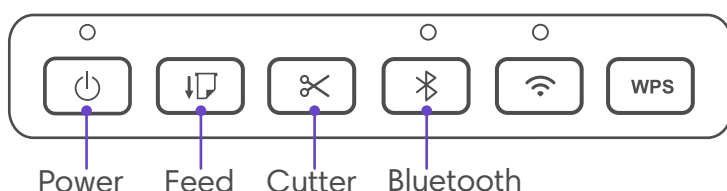

Power


Feed

Cutter

Bluetooth


2. Signing into SendPro®.

Sign into SendPro® Online from your Android mobile device.


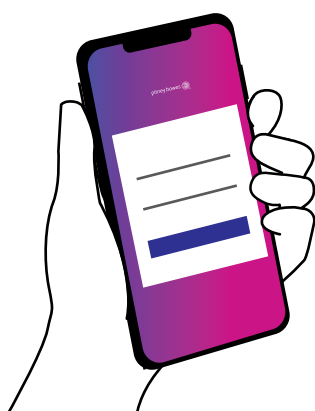


3. Connecting the printer.

1. Connect the power cord to your printer as shown.

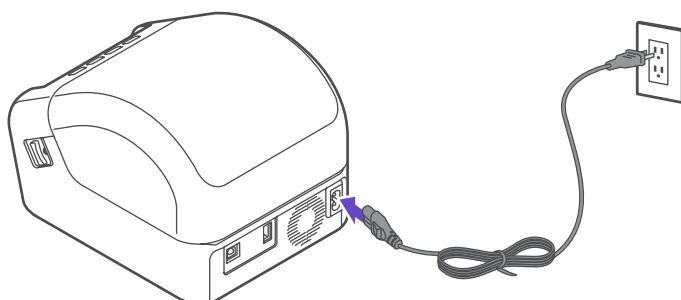


2. Press the Power button.

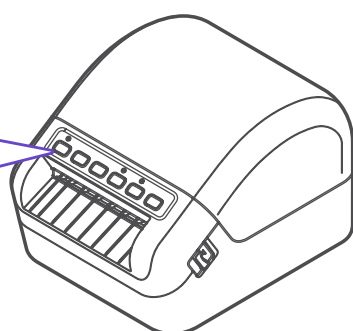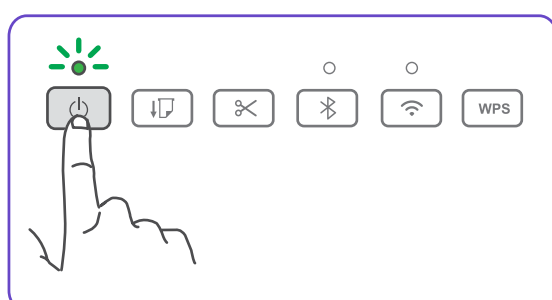


4. Loading the label roll.


1. Pull the release levers on the both sides of the printer to unlock the cover, and lift the cover to open it. Remove the protective sheet from the output slot.

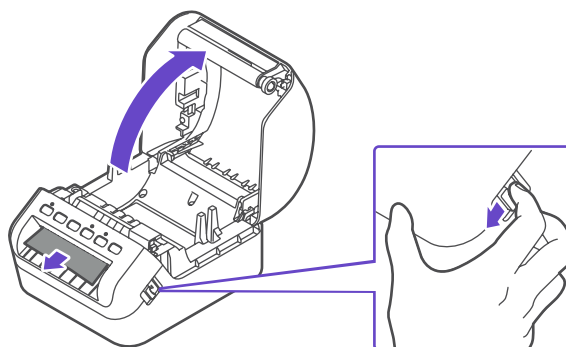


2. Place the label roll into the guide. Make sure the roll is inserted firmly in the guide and the stabilizer slides into the notch in the printer.

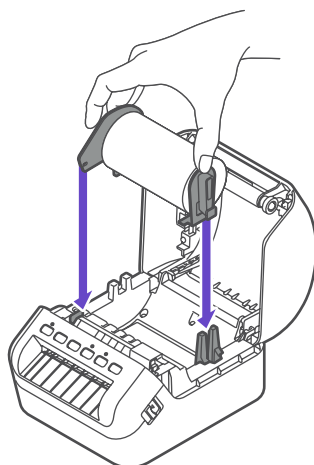


3. Thread the label roll straight through the printer, and align the edge of the roll with the upright edge of the output slot. Push the first label through the output slot until the end comes out of the slot as shown.

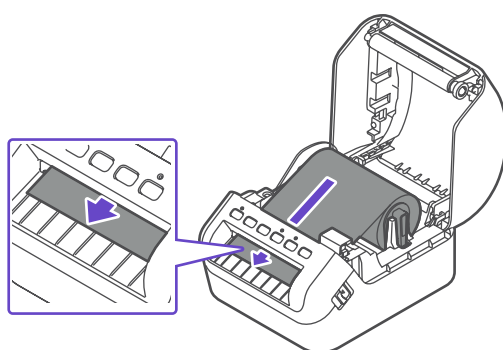


If experiencing trouble loading the label roll, try inserting from the side making sure the label is under the sensor.

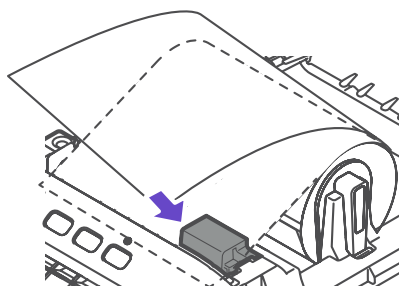

4. Close the cover.

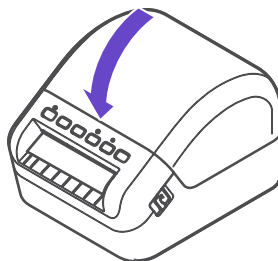


5. Press the **Feed** button to align the end of label.

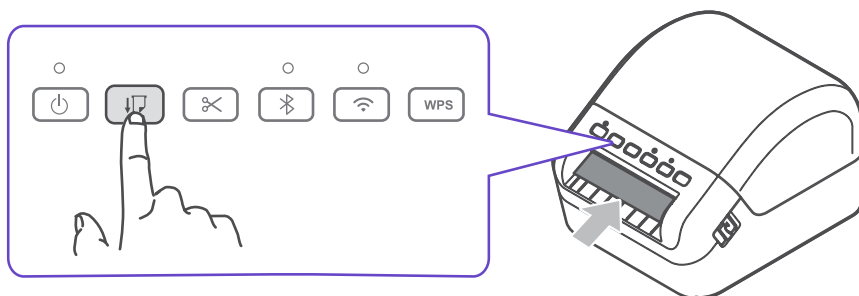


5. Connecting the scale to the printer.

Connect the USB wire from the scale to the printer, as shown.

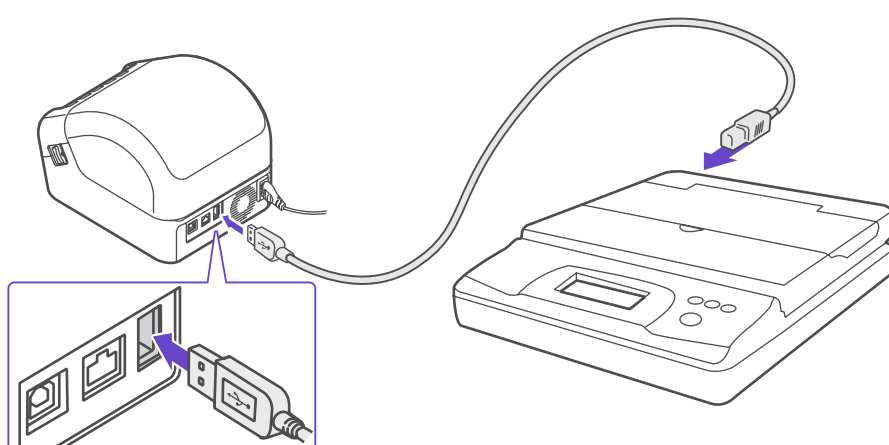


6. Pairing the printer by Bluetooth.

Press and hold Bluetooth button to pair printer with your mobile device.

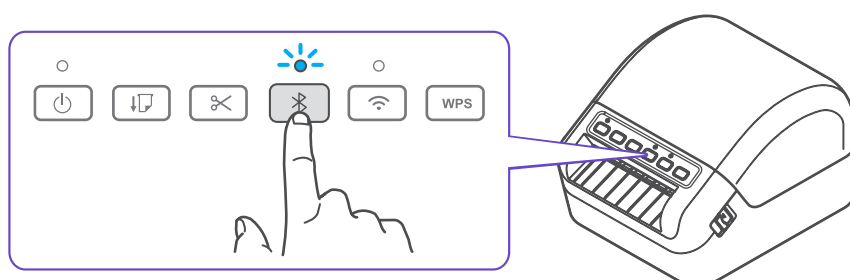


7. Setup the printer.


1. Open SendPro Mobile App.

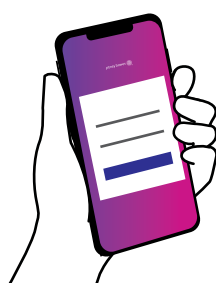


2. Tap **Menu** on Home screen (upper left icon), then Select **Printer Settings**.

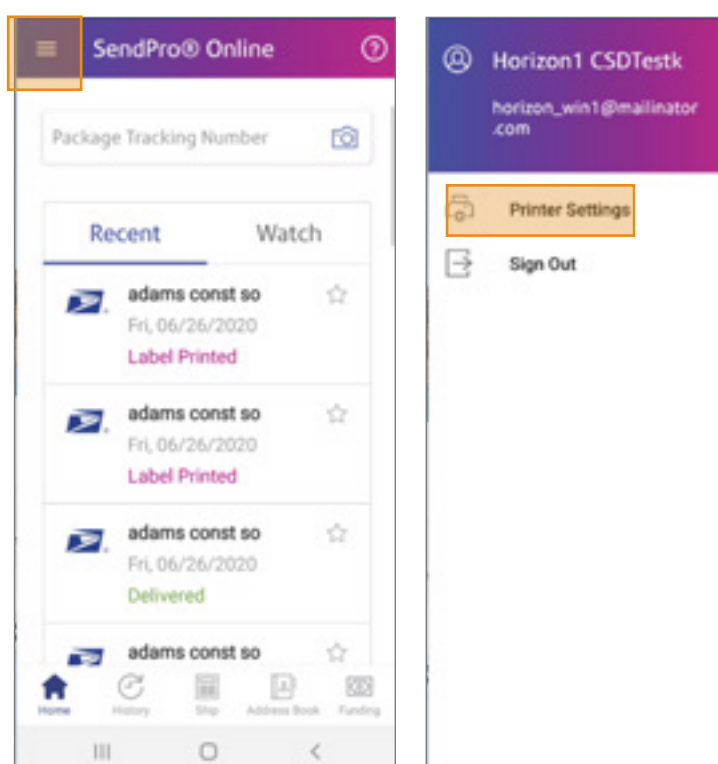



3. Select **Bluetooth Printer** and select **Roll - 4x6** for Label print size.

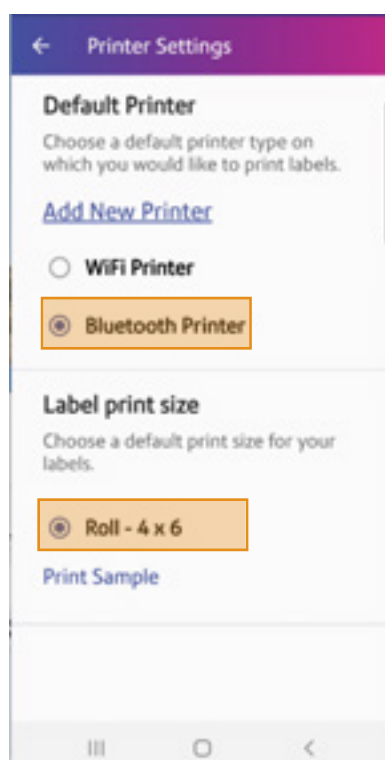


4. Tap on **Print Sample** for test print.

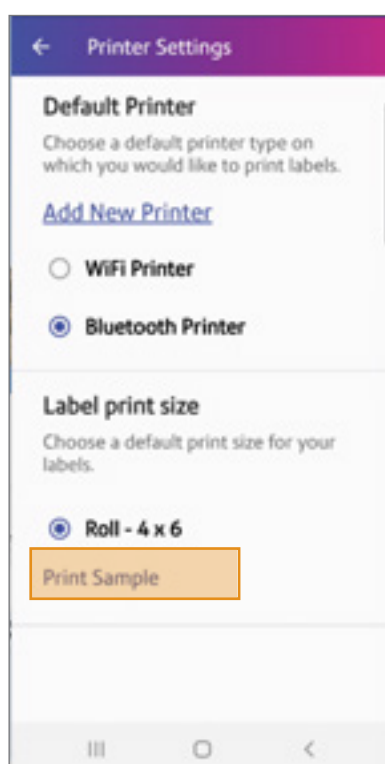

5. Select **QL-1110NWB** printer, then accept pairing to proceed printing.

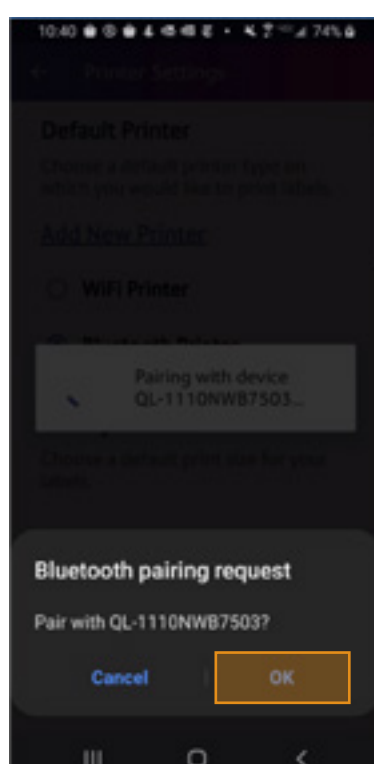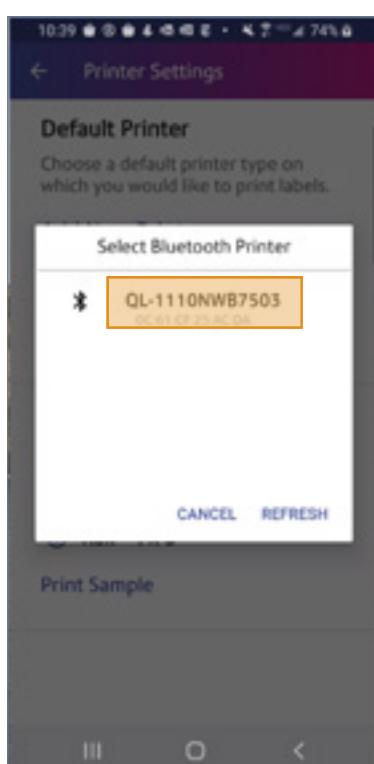

Now let’s get shipping!

You can access in-depth Online Help that covers all operator and feature aspects of your SendPro® software and MailSend Kit in detail. To access this information, press the Help () icon from your App.

Troubleshooting

Printing Issues

Labels printing too small

If your labels are printing too small, the wrong paper size may be selected. To correct this:

Select Settings icon  then Label Options.

If the Choose Format menu is set to Plain Paper - 8.5 x 11, select Roll - 4 x 6.

Note: If Plain Paper - 8.5 x 11 is always selected by default, you can change this to 4 x 6 by adjusting your default label printing settings.

Problem	Solution
The Status LED is not lit.	<ul style="list-style-type: none">• Check that the AC Power Cord is inserted. If it is inserted correctly, try plugging it into another AC power outlet.
The Printer does not print, or a printing error is received.	<ul style="list-style-type: none">• Check that the USB Cable is connected securely.• Remove the DK Roll and reinsert it.• Check that there is enough roll remaining.• Make sure that the DK Roll Cover is closed.• Turn off the Printer and then turn it on again. If there is still a problem, contact Pitney Bowes support.• If the Printer is connected via a USB hub, try connecting it directly to the computer. If not, try connecting it to a different USB Port.
A data transmission error appears on the computer.	<ul style="list-style-type: none">• Check that the correct port is selected from the “Print to the following port” list in the Printer Properties dialog box.• Wait until the Status LED stops flashing and then try printing again.
The label is not ejected correctly after printing.	<ul style="list-style-type: none">• Check that the Label Output Slot is not blocked.• Check that the DK Roll is set correctly by removing the DK Roll and reinstalling it.• Ensure that the DK Roll Cover is closed correctly.
Labels are jammed in the cutter.	<ul style="list-style-type: none">• Contact Mailcoms Customer Service.
Cutter error	<ul style="list-style-type: none">• If a cutter error occurs, keep the DK Roll Cover closed and press the Power Button. The cutter moves back to the normal position and the Printer turns off automatically. After the Printer is Off, check the Label Output Slot and remove any jammed labels.
Unable to reset an error.	<p>To reset an error:</p> <ol style="list-style-type: none">1. Open the DK Roll Cover, and then close it.2. If the error is not reset, press the Cutter Button.3. If the error is not reset, turn off the Printer, and then turn it on again.4. If the error is not reset, contact Pitney Bowes Customer Service.

Scale Issues

If the scale icon is grayed out and cannot be selected, or if the scale icon can be selected, but does not update to reflect the weight from the scale, this indicates that:

- The scale app has not been installed.
- There is nothing on the scale.
- There is a USB hub between the scale and the computer.

Ensure that the compatible scale is installed:
70lb/30Kg USB scale

Ensure that the scale app is installed. For details, see [Install the Scale](#).

If the scale icon is grayed out, place an item on the scale. The scale icon should then display the weight of the item on the scale.

Ensure that the USB cable is connected directly from the scale to the computer.

Do not use a USB hub between the USB scale and the computer.

Note: When the scale is connected to a computer with the USB cable, the power button on the scale will be disabled. The power button is only used when the scale is powered with a 9-volt battery. There is no need to use a battery if the scale is connected to the computer with a USB cable.



mailcoms

Address: Mailcoms Ltd, Units 6-8
Primary Point, Progress Drive,
Cannock, Staffordshire, WS11 0JF

Call: 01543 572 776
Email: info@mailcoms.co.uk